

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

 
Charging System: 1J-4

1) Measure the resistance between the three lead wires. If the resistance is out of specified value, replace the generator with a new one. Also, check that the generator core is installed properly.

Special tool
① 09900-25008 (Multi circuit tester set)

Tester knob indication
Resistance (Ω)

Generator coil resistance
1.2 - 1.8 Ω (B - B)
= 0 Ω (B - Ground)




④ Connect the generator coupler.
⑤ Reinstall the removed parts.

No-load Performance

1) Lift and support the fuel tank with the prop stay. Refer to "Fuel Tank Removal and Installation" in Section 1G (Page 1G-8).

2) Disconnect the generator coupler (1).



 
3) Start the engine and keep it running at 5 000 r/min.

④ Using the multi circuit tester, measure the voltage between three lead wires. If the tester reads under the specified value, replace the generator with a new one.

Special tool
① 09900-25008 (Multi circuit tester set)

Tester knob indication
Voltage (V)

Generator no-load performance (When engine is 6000 r/min)
16 V (AC) and more at 5 000 r/min



⑤ Connect the generator coupler.
⑥ Reinstall the removed parts.

Generator Removal and Installation


Removal

1) Drain engine oil. Refer to "Engine Oil and Filter Replacement" in Section 1B (Page 1B-10).

2) Remove the left covering. Refer to "Exterior Parts Removal and Installation" in Section 1D (Page 1D-7).

3) Lift and support the fuel tank with the prop stay. Refer to "Fuel Tank Removal and Installation" in Section 1G (Page 1G-8).

④ Disconnect the generator coupler (1) and clamp.



[Download PDF version of :](#)
2011 Gsxr 600 Owners Manual