

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



 
so many fake sites. this is the first one which worked! Many thanks

PERIODIC MAINTENANCE

ADJUSTING THE REAR DISC BRAKE

1. Check:

- Brake pedal position (distance "a" from the top of the rider footrest to the top of the brake pedal).
- Out of specification → Adjust.

 Brake pedal position (below the top of the rider footrest) 46.5 mm (1.83 in)

WARNING

- After adjusting the brake lever position, make sure the pin on the brake lever holder is firmly inserted in the hole in the adjusting dial.
- A soft or spongy feeling in the brake lever can indicate the presence of air in the brake system. Before the vehicle is operated, the air must be removed by bleeding the brake system. Air in the brake system will considerably reduce in loss of control and possibly an accident. Therefore, check and if necessary, bleed the brake system.

NOTICE


After adjusting the brake lever position, make sure there is no brake drag.

CHECKING THE FRONT BRAKE PADS

The following procedure applies to all of the brake pads.

1. Operate the brake.
2. Check:

- Front brake pad
- Wear indicator groove "a" has almost disappeared → Replace the brake pads as a set. Refer to "FRONT BRAKE" on page 4-16.



2. Adjust:

- Brake pedal position

.....


- a. Loosen the locknut "1".
- b. Turn the adjusting bolt "2" in direction "a" or "b" until the specified brake pedal position is obtained.

Direction "a"
Brake pedal is raised.

Direction "b"
Brake pedal is lowered.

WARNING

After adjusting the brake pedal position, check that the end of the adjusting bolt "c" is visible through the hole "d".



- c. Tighten the locknut "1" to specification.

3-13 topairviharuni.com

[Download PDF version of :](#)
2011 Yamaha Fz6r Owners Manual