

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

CYLINDER HEAD/VALVES

Blow out all oil passages in the cylinder head with compressed air.

Install the spring seal [1] and a new stem seal [2].

NOTE
Do not interchange the intake and exhaust stem seals.
- Intake stem seal [2] Brown
- Exhaust stem seal [2] Dark green

Lubricate the valve [5] stem and stem end sliding surface with molybdenum oil solution.

Insert the valve into the guide while turning it slowly to avoid damage to the stem seal.

Install the intake valve spring [1] and exhaust valve spring [2] with the spring retainers [3] facing the combustion chamber side.

NOTE
Do not confuse the intake spring retainers and exhaust spring retainers.
- Intake spring retainer: Two grooves
- Exhaust spring retainer: One groove

Install the tappet hole protector [1] into the valve lifter bore.

TOOL:
[1] Tappet hole protector
STJMG-KY20100 not available in U.S.A.

TOOLS, U.S.A. only:
See instructions on page 9-18

9-23

[Download PDF version of :](#)
2013 Crf250r Owners Manual