

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa

 


My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

 


Pick-up helper spring setting

The ground pressure of the pick-up can be adjusted by springs (1) which are fitted over the two hydraulic cylinders. Three different tensions can be selected by means of a sliding adjuster, the middle element position being used for normal operating conditions.

Adjustment is carried out with the pick-up raised.

- If the pick-up bounces on uneven ground, reduce the tension of the helper spring.
- If the optional gauge wheels are used then -
for soft ground increase the helper spring pressure
for hard ground reduce the helper spring pressure.



Tractor hitching and road transport

- Hitch the baler to the tractor so that:
 - the pick-up has sufficient ground clearance,
 - the opened tail gate leaves sufficient space for the baler to roll clear.
- Connect p.i.o. shaft with wide-angle universal joint to tractor and secure guard tubes with retaining chain to stop them rotating.
- Connect hydraulic lines and electrical cable to the tractor.
- Raise the jack a little, press down catch (1) and swing the jack wheel up until it locks.
- Raise the jack wheel completely, until it is locked against the hoisting catch (2).
- Raise pick-up to the stop, for road travel.
- Then set the lever beams, provided on the control box, to "closed" position. The pick-up and the tail gate are now hydraulically locked.

Important: When making tight turns, make sure that the wide-angle universal joint (tractor end) is not angled more than 70°, or damage to the joints will result. Damage can take place even if the machine is stationary.

RepairManual.com

[Download PDF version of :](#)
2 3 Deutz Baler Service Manual