

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

GX160K1 · GX160K1

b. DISASSEMBLY/REASSEMBLY

PILOT JET
REASSEMBLY: Clean thoroughly with compressed air before installation. Lightly lubricate the O-ring to ensure easy installation into carburetor body.

NOTE:
Clean the outside of the carburetor before disassembly.

THROTTLE STOP SCREW
ADJUSTMENT: P. 3-6

CARBURETOR BODY
CLEANING: P. 5-4

FUEL VALVE
CHOKE LEVER
CHOKE PLATE
SEGMENT CLIP

PILOT SCREW
REASSEMBLY: Inspect for wear or damage before installation.
ADJUSTMENT: P. 3-6

MAIN NOZZLE
REASSEMBLY: Clean thoroughly with compressed air before installation.

MAIN JET
REASSEMBLY: Clean thoroughly with compressed air before installation.
MAIN JET NUMBER: P. 3-3, 4

FLOAT
REASSEMBLY: Check for smooth movement after installation.

SET BOLT
DISASSEMBLY: After assembly, check for any sign of fuel leakage.

FUEL DRAIN BOLT

FLOAT VALVE
REASSEMBLY: Check for worn float valve seat, float valve or weak spring before installation.

VALVE SEAT
FLOAT VALVE

OK **REPLACE**

c. INSPECTION

• FLOAT LEVEL HEIGHT

Place the carburetor in the position as shown and measure the distance between the float top and carburetor body when the float just contacts the seat without compressing the valve spring.

Standard float height: 12.7 mm(0.54 in)

If the height is out of specification, replace the float and/or the float valve. Recheck the float height.

FLOAT LEVEL GAUGE
07401-0010000

[Download PDF version of :](#)
Honda Service Manual Gx160 5 Gas Engine