

Download File PDF Honeywell 5000 Manual

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

FocusPRO™ TH5000 Series

- TH5110D For 1 Heat/1 Cool systems
- TH5200D For up to 2 Heat/2 Cool systems
- TH5300D For up to 3 Heat/3 Cool systems

Follow the procedure below to configure the thermostat to match the installed heating/cooling system, and customize feature operation as desired.

To begin, press and hold the **▲** and **▶** buttons until the display changes.

Press **HEAT** or **COOL** to change settings. Press **HEAT** to advance to the next function. Press **DOCK** to exit and save settings.

Setup function	Settings & options (factory default in bold)
1 System type	1 Heat/1 cool conventional 2 Heat/1 cool zone (single zone heat) 3 Heat/1 cool zone (multi zone heat) 4 Heat/2 cool conventional 5 Heat/2 cool zone (multi zone heat) 6 Heat/2 cool zone (multi zone heat) 7 Heat/3 cool conventional 8 Heat/3 cool zone (multi zone heat) 9 Heat/3 cool zone (multi zone heat)
2 Chamber valve (3/4" standard)	0 Chamber valve (3/4" standard) engaged in cooling 1 Chamber valve (3/4" standard) engaged in heating
3 Fan control	0 On or off Remote — equipment controls fan in heating 1 Equipment controlled controls fan in heating
4 Auxiliary heat cycle rate (C/F)	0 For use or off Remote of less than 90% efficiency 1 For use or off Remote of less than 90% efficiency 2 For use or off Remote of less than 90% efficiency 3 For use or off Remote of less than 90% efficiency
5 Emergency heat cycle rate (C/F)	0 For electric emergency heat 1 For gas or oil Remote of less than 90% efficiency 2 For gas or oil Remote of less than 90% efficiency
6 Stage 2 compressor cycle rate (C/F)	0 Recommended for most compressors 1 Other cycle rate systems: 1, 2, 4, 6 or 8 C/F
7 Manual Mode (Chamber Valve)	0 Auto (Chamber Valve/Control) 1 Auto (Chamber Valve/Control) 2 Auto (Chamber Valve/Control)
8 Temperature protection	0 Off 1 Fan (remote compressor off heat) 2 (Other systems: 0, 1, 2, 3 or 4 minutes off heat)
9 Auxiliary heat control	0 Disabled (Heat pump) 1 Enabled
10 Heat temperature range steps	00 Min. heat temperature settings in 70° F (21° C) 10 Min. heat temperature settings in 70° F (21° C) 20 Min. heat temperature settings in 70° F (21° C)
11 Cool temperature range steps	00 Min. cool temperature settings in 65° F (19° C) 10 Min. cool temperature settings in 65° F (19° C) 20 Min. cool temperature settings in 65° F (19° C)

<http://customer.honeywell.com/techhttp://packe-dlR69-1922EP8.pdf>

[Download PDF version of :
Honeywell 5000 Manual](#)