

Download File PDF Honeywell 5828v Manual

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

Honeywell

000001 5828 Rev A
ADEMCO 5828/5828V
Wireless Bidirectional Fixed-Word Keyboards

INSTALLATION AND SETUP GUIDE

GENERAL INFORMATION

The ADEMCO 5828 and 5828V are wireless, bidirectional, fixed-word keyboards that may be used in conjunction with 1200V and 1202V series residential control panels. 1202V models require one or either a 3000 Transceiver or the PS Transceiver. The 3000 Transceiver is required for the 5828V Key Pad Transmitter. The 5828/5828V keyboards are not compatible with conventional control panels that have three-digit room numbers (e.g., VISTA1200RP).

- Each keyboard provides:
 - Four programmable speed function keys
 - Roll-over plates for easy removal of the keypad and battery replacement
 - On-board charging station (AC adapter kit, ADEMCO PS 1200RP)
 - Battery powered with 3-AAA batteries
- The 5828V keypad additionally provides:
 - Alarm Message center
 - Alarm Message center
 - Alarm Message LED indicator
 - Built-in microphone and speaker

NOTES

- The 5828/5828V cannot be used as the primary system keypad, and must not be used to program or test any security system. All control require a hard-wired keypad or Control Panel/Keypad with one. Once programmed, the 5828/5828V can be used to initiate all system functions of a fixed English keypad.



5828 Keypad with Front Cover Removed



5828V Keypad with Front Cover Removed

Operation (See NOTE below)

- Battery Powered Operation:** When powered by battery, the keypad activates when any key is pressed. When the keypad is powered, the keypad sends a system status report, and displays and/or announces the present status transmitted for the system.
- AC Powered Operation:** When powered by AC, the keypad remains active at all times. The display in normal status will cause the display to automatically return to the normal display mode after the new status is received and displayed on the new status.

If AC power is not, the keypad will revert to battery powered operation and AC power is restored and a new status report is made (MUTE).

NOTE: Whether the unit is powered by battery or AC, the 5828/5828V may take up to 3 seconds to display and/or announce the current status after pressing the MUTE key.

WALL MOUNTING

Before mounting the 5828 & 5828V permanently, determine a good RF location as follows:

- If interfacing to a VISTA panel, try mounting the unit with the panel from different locations.
- If interfacing to a VISTA panel, perform a CoNo Co test from the panel. Before the CoNo Co test, make up the installation and testing guide for the panel.

Local mounting locations in or near large metal objects, since they can decrease the transmission range or block transmission.

- Remove the mounting plate to the wall, using proper steel hardware through the air mounting hole.
- Plug the cord from the optional power pack into the keypad's DC cord connector, and secure the wires through the wire grommet on the back of the keypad.
- Position the keypad over the mounting plate and slide down, engaging the four retaining clips on the plate with the corresponding on the keypad.

DESKTOP MOUNTING

For full portability, the keypad may be placed in any convenient, RF suitable location and operated in its battery-powered mode, or even as AC, which is powered by the optional Power Pack/Charging Station, AC, ADEMCO PS 1200RP.

BATTERY INSTALLATION OR REPLACEMENT

CAUTION: Remove the AC/DC power connector from the keypad if applicable, before attempting to install or replace the batteries.

1. Separate the keypad from its mounting plate by adding the keypad up and away from the mounting plate.
2. Open the battery compartment door to expose the batteries.

[Download PDF version of :](#)
Honeywell 5828v Manual