

# Download File PDF Honeywell 6150 Manual

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

[Download PDF version of :](#)  
[Honeywell 6150 Manual](#)

**Honeywell**

 
ADEMCO 6150V & 6160V  
Voice Remote Keypad  
**USER GUIDE**

This document provides Operating Instructions for your Keypad's voice features. Refer to your security system User Guide for all other security system functions and operating procedures.

**Message Center**

The ADEMCO 6150V/6160V Keypads feature a voice message center that lets you record and playback one message.

- The message can be up to 2.5-minutes long
- The message remains in the Keypad's memory until a new message is recorded.
- The volume control of the message is adjustable.
- Refer to the procedures below when using the Message Center functions.



**To record a message:** Press [6] FUNCTION + [3] VOICE + [1] RECORD keys. The red MESSAGE indicator will light, indicating record in progress.

**Note:** A message cannot be recorded during the Exit Delay period.

**To end recording:** Press [1] RECORD key.

The red MESSAGE LED will flash indicating a message waiting to be played. After the message is played once the MESSAGE LED will go off.

**To play a message:** Press [6] FUNCTION + [3] VOICE + [2] PLAY keys.

The recorded message plays and the red MESSAGE LED turns off. The recorded message will remain in memory until a new message is recorded.

**To adjust the volume:** Press [6] FUNCTION + [3] VOICE + [5] VOLUME keys, then press the desired volume control key [2] (Up) or [8] (Down).

**Note:**

- Adjusting message volume also adjusts status volume. Volume control is adjusted when playing a message.
- Each time you enter the command to adjust the volume, the word "CHECK" will be heard to verify the correct setting.

(Continued on Other Side)