

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

[Download PDF version of :](#)
Honeywell 6150 Owners Manual

Honeywell

ADEMCO 6150V & 6160V
Voice Remote Keypad
USER GUIDE

This document provides Operating Instructions for your Keypad's voice features. Refer to your security system User Guide for all other security system functions and operating procedures.

Message Center

The ADEMCO 6150V/6160V Keypads feature a voice message center that lets you record and playback one message.

- The message can be up to 25-minutes long
- The message remains in the Keypad's memory until a new message is recorded.
- The volume control of the message is adjustable.
- Refer to the procedures below when using the Message Center functions.



To record a message: Press [6] FUNCTION + [3] VOICE + [1] RECORD keys. The red MESSAGE indicator will light, indicating record in progress.

Note: A message cannot be recorded during the Exit Delay period.

To end recording: Press [1] RECORD key.

The red MESSAGE LED will flash indicating a message waiting to be played. After the message is played once the MESSAGE LED will go off.

To play a message: Press [6] FUNCTION + [3] VOICE + [2] PLAY keys.

The recorded message plays and the red MESSAGE LED turns off. The recorded message will remain in memory until a new message is recorded.

To adjust the volume: Press [6] FUNCTION + [3] VOICE + [5] VOLUME keys, then press the desired volume control key [2] (Up) or [8] (Down).

Note:

- Adjusting message volume also adjusts status volume. Volume control is adjusted when playing a message.
- Each time you enter the command to adjust the volume, the word "CHECK" will be heard to verify the current setting.

(Continued on Other Side)