

Download File PDF Honeywell Focuspro 5000 Manual

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

FocusPRO™ TH5000 Series

- TH5110D For 1 Head/1 Cool systems
- TH5200D For up to 2 Head/2 Cool systems
- TH5300D For up to 3 Head/3 Cool systems

Follow the procedure below to configure the thermostat to match the installed heating/cooling system, and customize feature operation as desired.

To begin, press and hold the **▲** and **▶** buttons until the display changes.

Press **▲** or **▼** to change settings.
Press **HEAT** to advance to the next function.
Press **COOL** to exit and save settings.

Setup function	Settings & options (factory default in bold)
1 System type	1 Heat/1 Cool conventional 2 Heat/1 Cool heat pump (no aux. heat) 3 Heat/1 Cool heat pump (with aux. heat) 4 Heat/2 Cool conventional 5 Heat/2 Cool conventional 6 Heat/2 Cool heat pump (no aux. heat) TH5200D only 7 Heat/2 Cool heat pump (with aux. heat) TH5300D only
2 Chamber valve (HV) mode	0 Chamber valve (HV) terminal energized in cooling 1 Chamber valve (HV) terminal energized in heating
3 Fan control (FanOn)	0 On or off (fanless) — equipment controls fan in heating 1 On or off (fanless) — thermostat controls fan in heating
4 Stage 1 heat cycle rate (CPR)	0 For gas or oil furnaces of less than 90% efficiency 1 For gas or oil furnaces of 90% or greater efficiency 2 For electric furnaces & furnaces of over 90% efficiency 3 For electric furnaces
5 Stage 2 heat cycle rate (CPR)	0 For gas or oil furnaces of less than 90% efficiency 1 For gas or oil furnaces of 90% or greater efficiency 2 For electric furnaces & furnaces of over 90% efficiency 3 For electric furnaces
6 Auxiliary heat cycle rate (CPR)	0 For gas or oil furnaces of less than 90% efficiency 1 For gas or oil furnaces of 90% or greater efficiency 2 For electric furnaces & furnaces of over 90% efficiency 3 For electric furnaces
7 Emergency heat cycle rate (CPR)	0 For electric emergency heat 1 For gas or oil emergency heat 2 For gas or oil emergency heat (gas SCRs off) 3 For gas or oil (furnace of less than 90% efficiency)
8 Stage 3 compressor cycle rate (CPR)	0 Recommended for most compressors 1 Other cycle rate (options: 1, 2, 4, 8 or 16 CPR)
9 Manual thermostat (ManTher)	0 Manual thermostat (Heat/Cool/Off) 1 Auto thermostat (Heat/Cool/Auto/Off) 2 Auto thermostat (only Heat)
10 Temperature (Temp)	0 Fahrenheit 1 Celsius
11 Compressor protection	0 Fan override compressor off time 1 (Other options: 0, 1, 2, 3 or 4 minutes off time)
12 Auxiliary heat control (AHC)	0 Disabled (heat pump) 1 Enabled
13 Heat temperature range (High)	99 Heat temperature settings in 70°F (21°C) 100 Heat temperature settings in 70°F (21°C) to 14.5°F (-10°C)
14 Cool temperature range (High)	100 Cool temperature settings in 64°F (18°C) to 14.5°F (-10°C) 101 Cool temperature settings in 64°F (18°C) to 37°F (3°C)

<http://customer.honeywell.com/techhttp://packe-dlR69-192ZEPB.pdf>

[Download PDF version of :
Honeywell Focuspro 5000 Manual](#)