

Download File PDF Honeywell Pro 5000 Installation Manual

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

FocusPRO™ TH5000 Series

- TH5110D For 1 Heat/1 Cool systems
- TH5200D For up to 2 Heat/2 Cool systems
- TH5300D For up to 3 Heat/2 Cool systems

Follow the procedure below to configure the thermostat to match the installed heating/cooling system, and customize feature operation as desired.

To begin, press and hold the **▲** and **FAH** buttons until the display changes.

Press **▲** or **▼** to change settings. Press **HEAT** to advance to the next function. Press **DONE** to exit and save settings.

Setup function	Settings & options (factory default in bold)
1 System type	1 Heat/1 Cool conventional 2 Heat/1 Cool forced gas (oil, gas, heat) 3 Heat only - 2 zone system, 3 zone zone valves (Series 20), and heat only heat pump system 4 Cool only 5 Heat/1 Cool forced gas (oil, gas, heat) 6 Heat/1 Cool conventional 7 Heat/1 Cool conventional 8 Heat/1 Cool forced gas (oil, gas, heat) TH5200D only 9 Heat/1 Cool forced gas (oil, gas, heat) TH5300D only
2 Chamber valve (3/4" nominal)	0 Chamber valve (3/4" nominal) energized in cooling 1 Chamber valve (3/4" nominal) energized in heating
3 Fan control	0 On or off Remote - equipment controls fan in heating 1 Constant speed 2 On or off Remote - equipment controls fan in heating 3 On or off Remote - equipment controls fan in heating
4 Auxiliary heat cycle rate (C/F)	1 For gas or oil furnace of less than 90% efficiency 2 For gas or oil furnace of 90% or greater efficiency 3 For hot water systems 4 For electric heat pumps
5 Emergency heat cycle rate (C/F)	1 For electric emergency heat 2 For gas or oil furnace 3 For hot water systems 4 For electric heat pumps
6 Stage 2 compressor cycle rate (C/F)	0 Recommended for most compressors 1 Other cycle rate systems: 1, 2, 4, 6 or 8 C/F
7 Manual Run/Chamber Valve	0 Auto (energizes Chamber Valve) 1 Auto (energizes Chamber Valve) 2 Auto (energizes Chamber Valve)
8 Temperature protection	0 Off 1 On (Other systems: 0, 1, 2 or 3 minutes off heat)
9 Auxiliary heat control	0 Disabled (heat pump) 1 Enabled
10 Heat temperature range steps	00 100 Heat temperature settings in 70° F (21° C) 01 100 Heat temperature settings in 70° F (21° C) 02 100 Heat temperature settings in 70° F (21° C)
11 Cool temperature range steps	00 100 Cool temperature settings in 65° F (18° C) 01 100 Cool temperature settings in 65° F (18° C) 02 100 Cool temperature settings in 65° F (18° C)

<http://customer.honeywell.com/techhttpd/Pack6-DR69-1922EP.pdf>

[Download PDF version of :
Honeywell Pro 5000 Installation Manual](#)