

Download File PDF Rear Abs Service Manual

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

AMP MULTILOCK CONNECTORS A.1

AMP MULTILOCK CONNECTOR REPAIR

PART NUMBER	TOOL NAME
IC4-4100	AMP MULTILOCK CRIMPERS
SNAP-ON TT200-3	SNAP-ON PICK

General
AMP Multilock connectors are found between wire harnesses and component wiring and may be either floating or anchored in the frame with attachment clips.
See Figure A-1. Attachment clips (1) on the pin housings are fitted to Tabula on the motorcycle frame. The Tabula identify OE connector locations. To maintain serviceability, always return connectors to OE locations after service.
Obtain the necessary tools to repair the connector and terminals.

NOTE
For terminal crimping, use the AMP MULTILOCK CRIMPERS (Part No. IC4-4100).

Separating Pin and Socket Housings

1. If necessary, slide connector attachment clip Tabula to the large end of the opening.
2. See Figure A-1. Depress the release button (2) on the socket terminal side of the connector and pull the socket housing (3) out of the pin housing (4).

Mating Pin and Socket Housings

1. Hold the housings to match wire color to wire color.
2. Insert the socket housing into the pin housing until it snaps in place.
3. If OE location is a Tabula, fit large opening end of attachment clip over Tabula and slide connector to engage Tabula to small end of opening.

Removing Terminals from Housing

1. See Figure A-2. Bend back the latch (1) to free one end of secondary lock (2) then move on the opposite end. Hinge the secondary lock outward.
2. Look in the terminal side of the connector (opposite the secondary lock) and note the cavity next to each terminal.
3. Insert a pick or pin into the terminal cavity until it stops.

NOTE
If socketpin terminal tool is not available, a push pin safety pin or a SNAP-ON PICK (Part No. SNAP-ON TT200-3) may be used.

4. Press the tang in the housing to release the terminal.
 - a. **Socket:** Lift the socket tang (3) up.
 - b. **Pin:** Press the pin tang (1) down.

NOTE
A "click" is heard if the tang is released.

5. Gently tug on wire to pull wire and terminal from cavity.

Figure A-1. AMP Multilock Connector

1. Attachment clip
2. Release button
3. Socket housing
4. Pin housing

REPAIRWORLD.COM

2010 Touring Service: Appendix A Connector Repair A-1

[Download PDF version of :](#)
Rear Abs Service Manual