

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

LOCKING/UNLOCKING THE DOORS (1/2)

Locking/Unlocking the doors from the outside
Refer to "RENAULT" cards" or "Radio frequency remote control" in Section 1.

In some cases, the RENAULT card radio frequency remote control will not operate, or its access area will be modified:

- if the remote control battery is old or the vehicle battery discharged;
- if equipment operating on the same frequency as the card (mobile phones, etc.) is used;
- vehicle located in a high electromagnetic radiation zone.

It is then possible:

- to use the key integrated in the RENAULT card radio frequency remote control to unlock the front left-hand door;
- to lock each of the doors manually;
- to use the interior door locking/unlocking control (refer to the following pages).



Using the integrated key

- Remove cover A from the left-hand door using the end of integrated key 2 (or the key integrated in the radio frequency remote control) in opening 1.
- Insert the key into the lock in the front left-hand door and lock or unlock.



Locking the doors manually

- Turn screw B with the door open (using the end of the key) and close the door.

This means that the doors are then locked from the outside.

The doors may then only be opened from the inside or by using the key in the front left-hand door.

[Download PDF version of :](#)
Renault Fluence Owner Manual