

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler




so many fake sites. this is the first one which worked! Many thanks

ELECTRONIC FUEL INJECTION

13. Install fuel pump into fuel tank, hold float arm to the pump body and fit assembly to ensure float arm does not get caught or bent during installation.

14. Gently push down on fuel pump flange ensuring flange is centered.


15. Roughly align capped vent fitting with orientation marks on fuel tank to ensure float arm does not get bent or snagged.

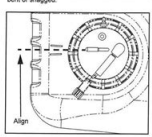

CAUTION
Failure to align the orientation marks may lead to interference with the fuel level float arm and cause incorrect function.

16. While maintaining downward pressure, thread new PFA nut onto fuel tank and hand tighten. Use care when starting PFA nut, ensuring threads are properly aligned. Verify orientation marks are still aligned between fuel pump and fuel tank.


17. Torque PFA nut to specification using the Fuel Pump Service Tool (P/S-50323), 3/8 in. extension and a calibrated torque wrench.

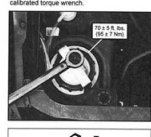

Fuel Pump PFA Nut:
70 ± 5 ft. lbs. (95 ± 7 Nm)

18. Verify alignment of fuel pump and tank orientation marks.

19. Connect the fuel line to the fuel pump outlet.



IMPORTANT: Be sure to engage the white retainer on fuel line until it snaps into place. Pull on fuel line lightly to confirm connection.

20. Connect the fuel pump electrical harness.

21. Install the lower seal base.

22. Test the fuel pump by turning on the key and listening for the pump to activate. Cycle the key several times to prime the system.

4.35

[Download PDF version of :](#)
2011 Polaris Ranger 500 Service Manual